





 


 











## Aktivera Telia Kabel-tv

Anslut din tv till antennuttaget och gör en kanalsökning.

Kanalerna finns på:

| Program   | Kanal | Bildbärvåg (MHz) |
|---|-------|------------------|
| SVT1   | 5     | 175,25           |
| SVT2   | 7     | 189,25           |
| TV3    | 8     | 196,25           |
| TV4    | 9     | 203,25           |
| Kanal 5    | 10    | 210,25           |
| TV6   | 11    | 217,25           |
| Kunskapskanalen    | 12    | 224,25           |
| TV12   | S11   | 231,25           |
| MTV    | S13   | 245,25           |
| TV10   | S14   | 252,25           |
| Barnkanalen/SVT24   | S15   | 259,25           |
| Eurosport    | S16   | 266,25           |
| Discovery    | S17   | 273,25           |
| TV8    | S18   | 280,25           |
| Kanal 9    | S19   | 287,25           |
| Sjuan    | S20   | 294,25           |
| Kanal 11   | S22   | 311,25           |
| V sport extra    | S27   | 351,25           |